

Duct/Immersion Temperature Sensor

Active sensor (0...10 V) for measuring temperature in duct applications. In connection with a stainless steel or brass thermowell also applicable for pipe applications. NEMA 4X / IP65 rated enclosure.

Sensor Datasheet

22DT-12.





Type Overview

Туре	Output signal active temperature	Probe length	Probe diameter
22DT-12H	DC 05 V, DC 010 V	50 mm	6 mm
22DT-12L	DC 05 V, DC 010 V	100 mm	6 mm
22DT-12N	DC 05 V, DC 010 V	150 mm	6 mm
22DT-12P	DC 05 V, DC 010 V	200 mm	6 mm
22DT-12R	DC 05 V, DC 010 V	300 mm	6 mm
22DT-12T	DC 05 V, DC 010 V	450 mm	6 mm

Technical Data

Electrical data	Power Supply DC	1524 V, ±10%, 0.35 W
	Power Supply AC	24 V, ±10%, 0.82 VA
	Electrical connection	Removable spring loaded terminal block max. 2.5 mm ²
	Cable entry	cable gland PG11 Ø610 mm, with strain relief Ø68 mm
Functional data	Multirange	YES
	Output signal active note	Output DC 05/10 V with Jumper adjustable Voltage output: min. 5 k Ω load
	Media	Air Water
Measuring data	Measured values	Temperature
	Measuring range temperature	range selectable Setting range [°C] range [°F] Factory setting
		S0 -5050 °C -30130 °F S1 -10120 °C 0250 °F S2 050 °C 40140 °F S3 0250 °C 30480 °F S4 -1535 °C 0100 °F S5 0100 °C 40240 °F S6 -2080 °C 4090 °F S7 0160 °C 0150 °F
	Accuracy temperature	±1% of measuring range @ 21 °C
Materials	Cable gland	PA6, black
	Housing	Cover: Lexan, Belimo orange NCS S0580- Y6OR Bottom: Lexan, Belimo orange NCS S0580- Y6OR Seal: 0467 NBR70, black

BELI	MO

Sensor Datasheet

Safety data	Ambient humidity	85% r.h., non-condensing
	Ambient Temperature	-3550 °C [-30122 °F]
	Medium temperature	-50160 °C [-60320 °F]
	Housing surface temperature	Max. 70 °C [160 °F]
	Protection class IEC/EN	III Protective extra-low voltage (PELV)
	Protection class UL	UL Class 2 Supply
	EU Conformity	CE Marking
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-9
	Certification UL	pending
	Degree of protection IEC/EN	IP65
	Degree of protection NEMA/UL	NEMA 4X
	Quality Standard	ISO 9001

Safety notes

Remarks



S

The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

· Local laws, health & safety regulations, technical standards and regulations

- · Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

General remarks concerning sensors When using lengthy connection wires (depending on the cross section used) the measuring result might be falsified due to a voltage drop at the common GND-wire (caused by the voltage current and the line resistance). In this case, 2 GND-wires must be wired to the sensor - one for supply voltage and one for the measuring current. Sensing devices with a transducer should always be operated in the middle of the measuring range to avoid deviations at the measuring end points. The ambient temperature of the transducer electronics should be kept constant. The transducers must be operated at a constant supply voltage (±0.2 V). When switching the supply voltage on/off, onsite power surges must be avoided. Build-up of Self-Heating by Electrical Temperature sensors with electronic components always have a dissipative power which **Dissipative Power** affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power should be taken into account when measuring temperature. In case of a fixed operating voltage (±0.2 V) this is normally done by adding or reducing a constant offset value. As Belimo transducers work with a variable operating voltage, only one operating voltage can be taken into consideration, for reasons of production engineering. Transducers 0...10 V / 4...20 mA have a standard setting at an operating voltage of DC 24 V. That means, that at this voltage, the expected measuring error of the output signal will be the least. For other operating voltages, the offset error will be increased by a changing power loss of the sensor electronics. If a re-calibration should become necessary later directly on the sensor, this can be done by means of a trimming potentiometer on the sensor board.



	ess		

Optional accessories	Description	Туре	
	Mounting flange 6 mm, Plastic (adjustable), up to max. 120 °C Mounting flange 6 mm, Brass, up to max. 260 °C	A-22D-A03 A-22D-A05	
Mandatory accessories	Description	Туре	
	Thermowell pocket Stainless steel, 50 mm, G1/2", SW27	A-22P-A06	
	Thermowell pocket Stainless steel, 100 mm, G1/2", SW27	A-22P-A08	
	Thermowell pocket Stainless steel, 150 mm, G1/2", SW27	A-22P-A10	
	Thermowell pocket Stainless steel, 200 mm, G1/2", SW27	A-22P-A12	
	Thermowell pocket Stainless steel, 300 mm, G1/2", SW27	A-22P-A14	
	Thermowell pocket Stainless steel, 450 mm, G1/2", SW27	A-22P-A16	
	Thermowell pocket Brass, 50 mm, G1/2", SW27	A-22P-A18	
	Thermowell pocket Brass, 100 mm, G1/2", SW22	A-22P-A20	
	Thermowell pocket Brass, 150 mm, G1/2", SW22	A-22P-A22	
	Thermowell pocket Brass, 200 mm, G1/2", SW22	A-22P-A24	
	Thermowell pocket Brass, 300 mm, G1/2", SW22	A-22P-A26	
	Thermowell pocket Brass, 450 mm, G1/2", SW22	A-22P-A28	
	For Immersion Application a Thermowell pocket A-22P-A is recom	mended.	
Scope of delivery	Mounting Clip		


Screws

Adhesive foil





Wiring diagram

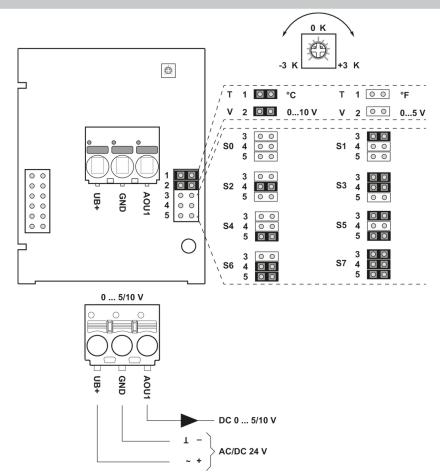

The adjustment of the measuring ranges is made by changing the bonding jumpers. The output value in the new measuring range is available after 2 seconds.

Setting	range [°C]	range [°F]	Factory setting
S0	-5050 °C	-30130 °F	
S1	-10120 °C	0250 °F	
S2	050 °C	40140 °F	
S3	0250 °C	30480 °F	
S4	-1535 °C	0100 °F	
S5	0100 °C	40240 °F	
S6	-2080 °C	4090 °F	
S7	0160 °C	0150 °F	~





Dimensions

